

JOB SHEET 10-4
OS/32 COMMANDS
DISPLAY TIME/SET TIME

INTRODUCTION

The Display Time command displays the current date and time to the System Console. This is the procedure for verifying the accuracy of the display time. The display clock would not normally be in error, unless the battery pack in the CDS was bad, or the time set in CDS was off. The display clock is set at system start-up from the CDS clock.

The Set Time command allows the you to change the display date and time. The Display Time and Set Time commands are useful in verifying the UTC time set at the PUP.

OBJECTIVE

Use OS/32 commands to Display and Set Time at the PUP System Console.

REFERENCE

NWS EHB 6-531, OPERATIONS INSTRUCTIONS: PUP GROUP, Table 1-8

PROCEDURE

DISPLAY TIME

1. At the PUP System Console, type **D T** and press **RETURN**.
 - The system's current date and time displays.

SET TIME

1. Type **SE T** MM/DD/YY, hh:mm:ss, where

MM = month	DD = day	YY = year
hh = hour (UTC)	mm = minutes	ss = seconds

 - The 'seconds' are optional.
 - Verify the system date and time by typing **D T**.

END